
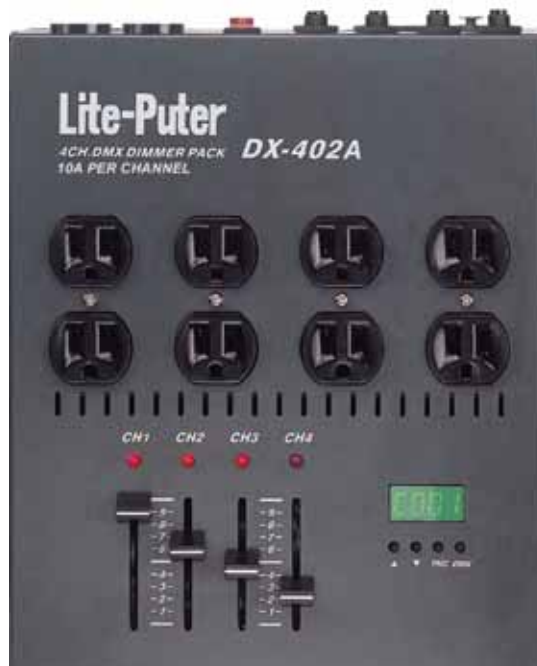


# DX-401A、 DX-402A

## 4 Channel DMX Dimmer Pack

【USER MANUAL】

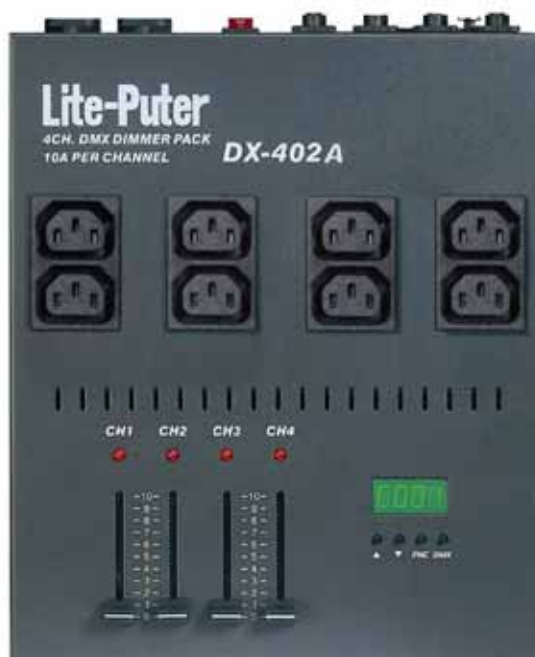

## Chapter 1. DX-401A / DX-402A Instruction

### 1-1 Feature

- Maximum 10A per channel, total 30A!
- DMX 512 signal.
- 2 sets of signal input/output, either 3 pin XLR connector or RJ11 telephone jack.
- LED display.
- Automatic warm up function, protects loads and extend the life of bulbs.
- Auto frequency tracking.
- Most advanced 'C3' dimming curve.
- DMX start address setting.
- Channel dimming test.
- 256 steps resolution.
- Faders for Manual operation. (DX-402A)
- Equipped with clamp for truss hanging or desktop operation.

### 1-2 Specification

- |                        |  |
|------------------------|--|
| ■ Power                | AC 100-120V, AC 200-240V, 45-63Hz, 2 input |
| ■ Output               | Maximum 10A per channel, total 30A.        |
| ■ Signal input/ output | DMX512/ 1990                               |
| ■ Signal connector     | XLR 3Pin, 6P4C, RJ11telephone jack         |
| ■ Dimension            | 220(W) x 260(H) x 70(D) mm                 |
| ■ Location             | TRUSS hanging or desktop operation.        |
| ■ Weight               | 3 Kg                                       |





## **1-4 Wiring**

### **CAUTION:**

**The wire & connectors used must follow the local government and other applicable rules and electrical regulations!**

**12 AWG : 20A**

**14 AWG : 15A**

**16 AWG : 13A**

**18 AWG : 10A**

## Chapter 1. DX-401A / DX-402A Instruction

### 2-1 Standard DMX512 Signal



This point flashing when receiving DMX

### 2-2 DMX start address setting

STEP-1 holding **【DMX】** , press **【▲】** or **【▼】** to find the start address.



**【▲】** : move 1 number forward : up to **Channel 512**



**【▼】** : move 1 number backward :down to **Channel 1**

DX-401A /DX-402A is a 4 channel dimmer pack so when setting this unit:

- as d. 0 0 1, the output is from Channel 1→ Channel 4.
- as d. 0 0 5, the output is from Channel 5→ Channel 8.
- It is allowed for setting more than 1 piece of DX-401A/DX-402A at the same start address.

### 2-3 Dimming/Switching setting

STEP-1 press **【DMX】** key into DMX status

STEP-2 press and hold the **【FNC】** key for 3 sec.



Default setting : all channel are dimming mode

STEP-3 press **【FNC】** key to select channel

STEP-4 press **【** **】** or **【** **】** to select dimming mode or switching mode



(dimming)



(Switching)

## 2-4 warm up setting (0...6%)

STEP-1 press **【FNC】** key



STEP-2 press **【FNC】** key to select the setting channel, EX :select channel 1

STEP-3 press **【** **】** , **【** **】** key to adjust



Channel 1 set on 6% for warm up

## 2-5 Bypass Full On

STEP-1 **Selecting the channel for instant play**

ex : *Select Channel 1.*

Hold the **【CH-1】** key for full on & it will come back to original dimming level when your finger off the key.



## 2-6 Monitoring the dimming level of every channel

STEP-1 Enter DMX status, Hold **【DMX】**

STEP-2 **Selecting the monitoring channel**

ex. : ( **▲** ) →Channel increasing **▼** ) →Channel decreasing)  
 showing the brightness of the selected channel




Showing channel 1, 68%.

- Press **DMX** key to cancel the setting.
- **DMX ADDRESS** will be displayed automatically after 10 minutes.

## 2-7 Dimming manually by fader (DX-402A)

ex.: Adjust the **VR-1 ~VR-4** , you can dim the Channel 1~ Channel 4 directly.

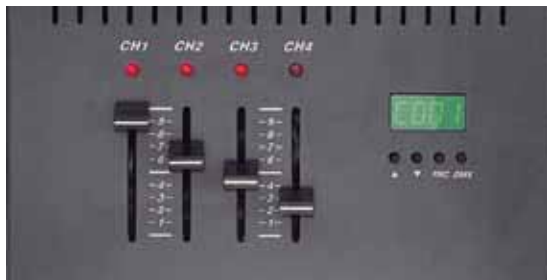

**P.S.** The high dimming value output when 2 signals (console V.S. manual fader) has been received.

## 2-8 Back to DMX ADDRESS display

Press **DMX** key in any conditions or automatically back to show DMX address when none key has been touched within 10 minutes.